SCOSCHE

NN1642B

IN-DASH INSTALLATION KIT FOR 2007-UP NISSAN ALTIMA

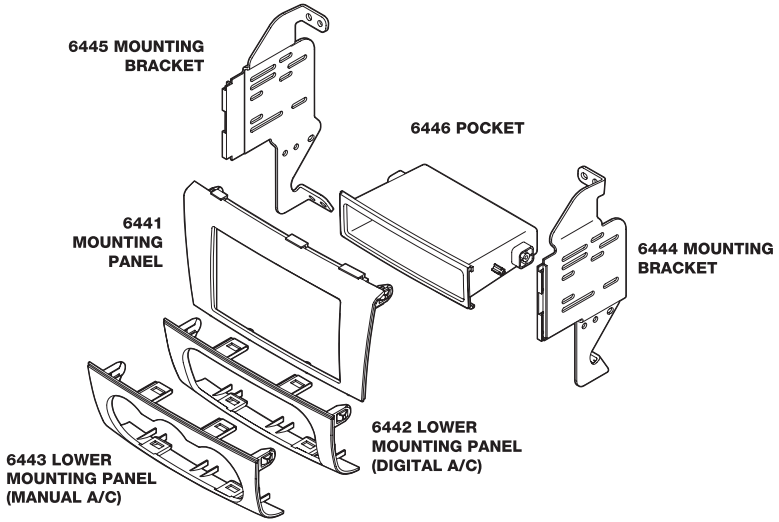

INTRODUCTION / PRELIMINARY

This premium installation kit is for 2007-Up Nissan Altima vehicles. Included are all the parts you need to mount your car stereo/cassette or CD player into your vehicle's dash. Refer to the individual instruction in this manual to remove your vehicle's factory radio and assemble the kit.

CAUTION:

DISCONNECT YOUR VEHICLE'S NEGATIVE BATTERY TERMINAL BEFORE THE INSTALLATION TO HELP PREVENT ELECTRICAL DAMAGE. WE RECOMMEND THE USE OF A VOLT/OHM METER OVER A TEST LIGHT TO CHECK WIRING. A TEST LIGHT OR GROUNDED WIRE PROBE CAN CAUSE DAMAGE TO THE VEHICLE'S COMPUTER AND/OR DIAGNOSTIC SYSTEMS. AVOID ALL FACTORY AIR BAG WIRING - AIR BAGS CAN ACCIDENTLY DEPLOY CAUSING SERIOUS INJURY OR DEATH.

NOTES:

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo for proper wiring and mounting instructions.

FACTORY WIRING CODES

For Factory Wiring Codes go to: **www.scosche-cars.com**

CAR STEREO CONNECTORS		
PROVIDE EASY CONNECTION OF YOUR CAR STEREO TO FACTORY WIRING HARNESS.		
NN04 2007-Up Nissan	**NAA2** 2007-Up Nissan	

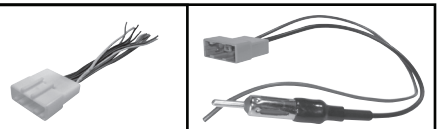

LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/codes and information pertaining to installation of this NN1642B kit for 2007-Up Nissan Altima vehicles. Scosche Industries, Inc. can not be held responsible for discrepancies/inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.

If you have any further questions, call our toll free technical help line at: **1-800-621-3695x3**

©2007 SCOSCHE INDUSTRIES, INC.

SI 8/07 NN1642B (3000003)

FACTORY STEREO REMOVAL

1. Using a panel removal tool, pry off the vent panel above the stereo and the small horizontal panel directly under the stereo.
2. Remove the (4) Phillips head screws securing the stereo to the dash. Save these screws. They will be used to install the new kit panel.
3. Unplug the connectors and remove the factory stereo.
4. If you have a factory CD changer, you will also need to pry off the CD changer panel, then unscrew and remove the CD changer.
5. Unscrew and remove the side brackets from the factory stereo and remove the air conditioning controls.

STEREO INSTALLATION

DIN ISO MOUNT

1. Snap the 6444 and 6445 left and right mounting brackets to the kit panel 6441.
2. For digital A/C controls, slide the 6442 lower panel into the bottom of the kit panel 6441.
3. For manual A/C controls, slide the 6443 lower panel into the bottom of the kit panel 6441.
4. Snap the A/C controls into the lower panel and screw it into the left and right mounting brackets using the original screws.
5. Snap the pocket 6446 in place and screw it to the left and right mounting brackets using the screws supplied with the kit.
6. Plug in connectors, align and mount the stereo to the left and right mounting brackets using the screws supplied with the stereo.
7. Snap the new kit panel assembly with stereo into the dash and secure using the original screws.
8. If you have a factory CD changer, screw it into place and snap the CD changer in place.
9. Snap the vent panel into place above the stereo and the horizontal panel into place under the stereo.

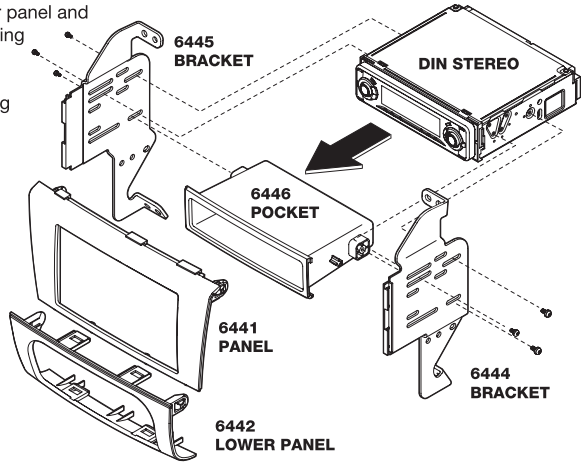

DOUBLE DIN ISO MOUNT

1. Snap the 6444 and 6445 left and right mounting brackets to the kit panel 6441.
2. For digital A/C controls, slide the 6442 lower panel into the bottom of the kit panel 6441.
3. For manual A/C controls, slide the 6443 lower panel into the bottom of the kit panel 6441.
4. Snap the A/C controls into the lower panel and screw it into the left and right mounting brackets using the original screws.
5. Plug in connectors, align and mount the stereo to the left and right mounting brackets using the screws supplied with the stereo.
6. Snap the new kit panel assembly with stereo into the dash and secure using the original screws.
7. If you have a factory CD changer, screw it into place and snap the CD changer in place.
8. Snap the vent panel into place above the stereo and the horizontal panel into place under the stereo.